




Precautions

- Do NOT operate any button when swimming or diving under water. In case of existence of water fog or drop on the interior surface of the Looking glass, please contact the authorized maintenance center for maintenance to avoid corrosion to internal electronic components.
 - Clean the surface with a soft cloth and clean water instead of chemicals (esp. soap water); otherwise, the rubber seal inside the case may be damaged.
 - Long-duration use of cold-light LCD may take much power.*
 - Please avoid strong shock (exc. Anti-shock series watches). The electronic watch can bear common shock. However, it may be damaged if subject to rough use or dropped to a hard surface.
 - Do NOT expose the watch to environments which is too hot or cold.
 - Do NOT expose the watch to strong electric field or environment with high radio frequency.
 - To avoid degraded service life, do not illuminate the EL lamp more than five Times on each day.*
 - The cold-light LCD is unapparent if the watch is exposed to sunlight.*
 - The monthly error is $\leq \pm 40$ sec. at normal temperature of 5 to 35°C (ranging within international standard allowance).
- *Suitable for LED or LCD model only

QTM1

CHRONOGRAPH FUNCTION: CENTER SECOND HAND CHRONOGRAPH 1/1 sec.
Timing up to 11 hours 59 minutes 59 seconds.

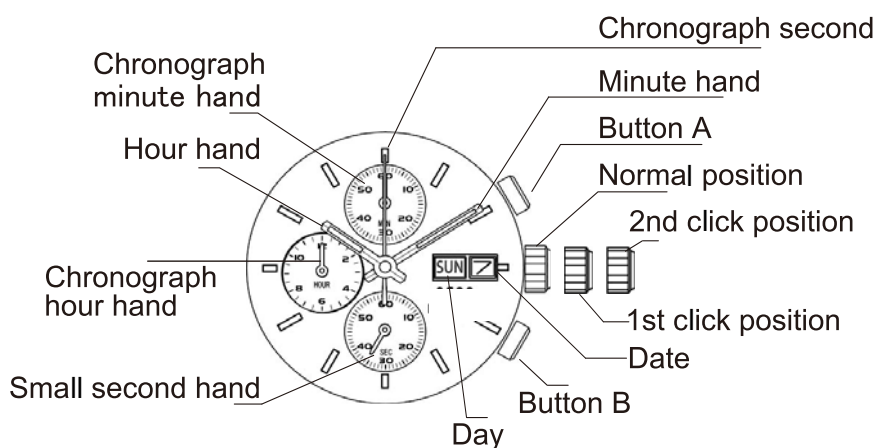

■ Setting the time

1. Pull the crown out to the 2nd click position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position, small second hand begins to run.

■ Setting the date

1. Pull the crown out to the 1st click position.
2. Turn the crown anticlockwise to set the date.
* If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change on the following day.
3. After the date has been set, push the crown back to the Normal position.

■ Setting the day

1. Pull the crown out to the 1st click position.
2. Turn the crown clockwise to set the day.
* If the day is set between the hours of around 11:15 PM and 6:00 AM, the day may not change on the following day.
3. After the day has been set, push the crown back to the Normal position

■ Using the chronograph

This chronograph is able to measure and display time in 1/1 second united up to maximum of 11 hours 59 minutes 59 seconds
The chronograph second hand keeps continuously for 11 hours 59 minutes 59 seconds after starting.

Measuring time with the chronograph

1. The chronograph can be started and stopped each time button "A" is pressed.
2. Pressing button "B" resets the chronograph and the chronograph second hand, chronograph minute hand, and chronograph hour hand return to zero position.



■ Chronograph reset(incl.after replacing battery)

This procedure should be performed when the chronograph second hand does not return to zero position after t chronograph has been reset, and including after the battery has been replaced.

1. Pull the crown out to the 2nd position.
2. Press button "A" to set the chronograph second hand to zero position. The chronograph hand can be advanced by continuously pressing button "A".
* The chronograph hour and minutes hands are synchronized with chronograph second hand.
* The chronograph second hand can be advanced one scale by pressing button "A" once.
* The chronograph second hand can be advanced rapidly by continuously pressing button "A".
3. Once the hand has been reset to zero position, push the crown back to the normal position.

* Do not return crown to normal position while chronograph second hand returns to 12:00 (ZERO) position.
Hand stops on the way when crown is returned to normal position and these positions are recognized as 12:00 (ZERO) position.

BATTERY CHANGE

The miniature battery which powers your watch should last approximately 2 years. However, because the battery is inserted at the factory to check the function and performance of the watch, its actual life once in your possession may be less than the specified period. When the battery expires, be sure to replace it as soon as possible to prevent any malfunction. For battery replacement, we recommend that you contact an AUTHORIZED DEALER and request the battery.

* The battery life may be less than 2 years if the alarm (if have) is used more than 10 seconds a day.

▲ WARNING

- Do not remove the battery from the watch.
- If it is necessary to take out the battery, keep it out of the reach of children. If a child swallows it, consult a doctor immediately.

▲ CAUTION

- Never short-circuit, heat or otherwise tamper with the battery, and never expose it to fire. The battery may burst, become very hot or catch fire.
- The battery is not rechargeable. Never attempt to recharge it, as this may cause battery leakage or damage to the battery.